



# Disassemble Proctor Silex® 2-Slice Extra Wide Slot Toaster Body

How to disassemble the entire toaster in order to reveal the internal components.

Written By: Carlos



## INTRODUCTION

### Disassembly


1. Flip toaster over.
2. Locate four phillips screws on the bottom of the toaster.
3. Loosen and remove.
4. Sides will pop out once screws are removed.

## Step 1 — Body of Toaster



- 1. Flip toaster over.

## Step 2

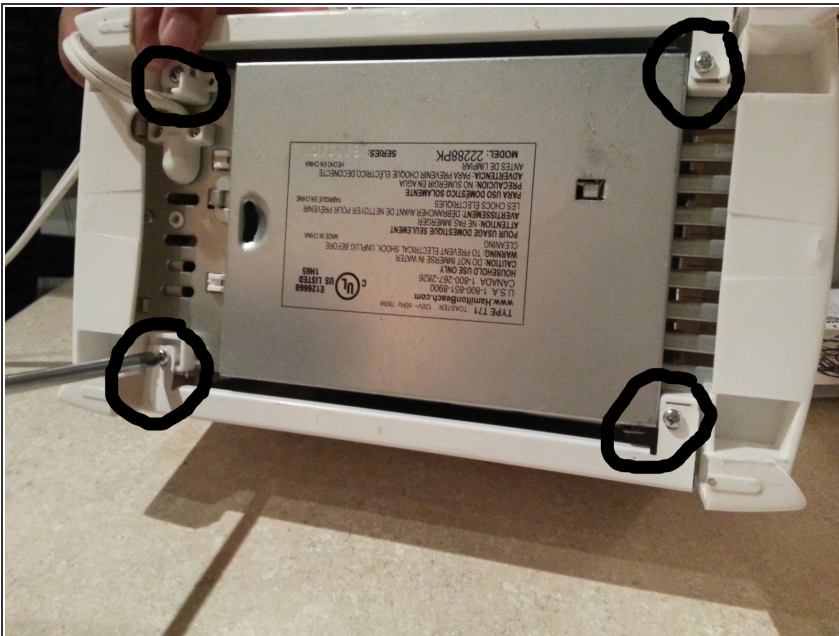

- 2. Locate four phillips screws on the bottom of the toaster.



## Step 3



- **3.** Loosen and remove using a Phillips head screwdriver

## Step 4



- **4.** Sides will pop out once screws are removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 11:23:28 AM.